

# LOW CUT FILTER CHEAT SHEET



Recommended Frequency for Low Cut Filter	
Vocals	Between 120Hz and 180Hz
Acoustic & Electric Guitars	100Hz
Pianos & Keyboards	100Hz
Bass Guitar	40Hz
Snare & Toms	50Hz
Drum Overheads	80Hz
Kick Drum	30Hz

## Additional Tips

### Vocals

Start at 120Hz. If the sound is still unclear, move the frequency up. If the sound becomes too "thin", move the frequency back down. You will most likely not set it higher than 180Hz.

### Kick Drum

Only use a low cut filter on your kick drum if your subwoofers are having a hard time.